


# Installation Information

## LIPS<sup>®</sup> A100 CYLINDER - LINEAR POSITION SENSOR INTRINSICALLY SAFE FOR HAZARDOUS MINING ENVIRONMENTS

ANZEx Qualified to Intrinsic Safety Standard Certificate numbers ITACS ANZEX 07.4039X		Ex ia I/IIC T4 (Ta= -40°C to +80°C)	
Electronics Version	Output Description:	Supply Voltage: V <sub>s</sub> (tolerance)	Load resistance:
EX03	0.5 - 4.5V (ratiometric with supply) [Output code 'A']	+5V (4.5 - 5.5V)	5kΩ min

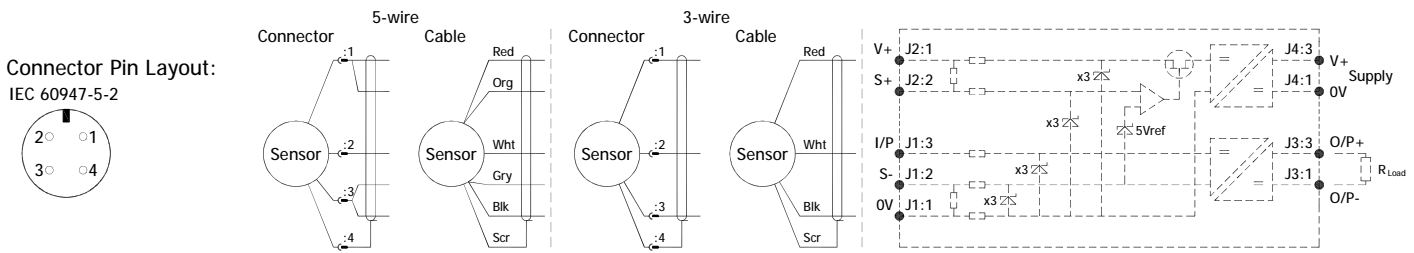

**Putting Into Service:** The sensor must be used with a galvanic isolation barrier designed to supply the sensor with a nominal 5V and to transmit the sensor output to a safe area. The barrier parameters must not exceed:-

- U<sub>i</sub> = 11.4V      I<sub>i</sub> = 0.46A      P<sub>i</sub> = 0.51W
- C<sub>i</sub> = 1.56µF\*      L<sub>i</sub> = 150µH\* ('Lxx', 'LQxx', 'Mxx' or 'MQxx' options) \*Figures for 150m cable
- C<sub>i</sub> = 1.01µF      L<sub>i</sub> = 50µH ('J' option)

The sensor is certified to be used with up to 150m of cable, cable characteristics must not exceed:-  
 Capacitance: max. total of: 550 nF  
 Inductance: ≤ 660 nH/m for max. total of: 100 µH

Approval only applies to specified ambient temperature range and atmospheric conditions in the range: 0.80 to 1.10 Bar, oxygen ≤ 21%.  
 The performance of the sensor may be affected by voltage drops associated with long cable lengths; For cable lengths exceeding 10 metres a five wire connection is recommended to eliminate errors introduced by cable resistance and associated temperature coefficients.  
 N.b. sensors supplied with cable, the free end must be appropriately terminated.

**Warning** - The M12 IEC 60947 connector may be rotated for purposes of convenient orientation of the connector and cable, however rotating the connector more than one complete revolution is not recommended.  
**Repeated rotation of the connector will damage the internal wiring!**


**Use:** The sensor is designed to measure linear displacement and provide an analogue output signal.

**Assembly and Dismantling:** The unit is not to be serviced or dismantled and re-assembled by the user.

**Maintenance:** Accumulated dust layer must not exceed a depth of 50 mm.

**Mechanical Mounting:** Via mounting thread, maximum tightening torque: 100Nm. See drawing P100-15, Installation Details Mounting Threads & Seals. An O ring seal is provided, size BS908 for M20 & 3/4 UNF thread or 14.3 x 2.4 for M18 thread. Install the target tube using the flange provided or fix directly into the piston rod using adhesive for instance, the end of the target tube can be proud or flush with the piston end face as required.

**Output Characteristic:** Target position at start of normal travel is 36.0 mm from seal face. The output increases as the target is moved away from the sensor body, the calibrated stroke is between 5 mm and 800 mm.

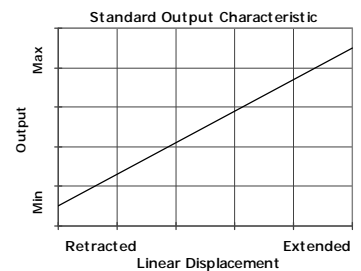

**Incorrect Connection Protection levels: Not protected** – the sensor is **not** protected against either reverse polarity or over-voltage. The risk of damage should be minimal where the supply current is limited to less than 50mA.